


Connecting the variable speed controller

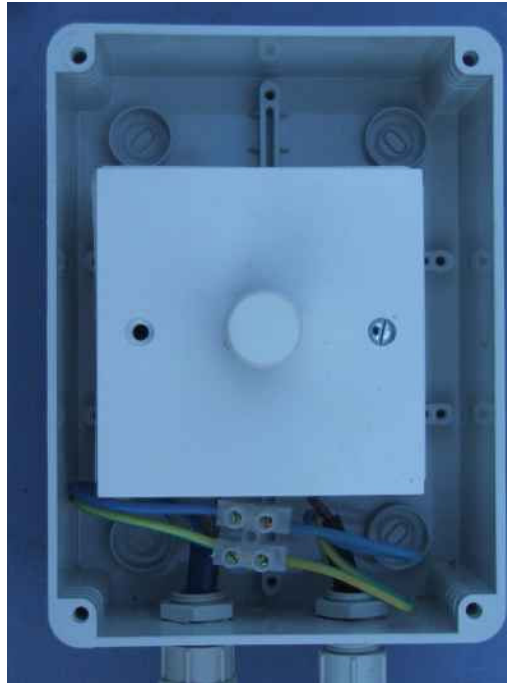

This is how the controller should look when finished, before the lid is replaced.
Please note: The neutral and earth wires are connected only to each other respectfully



This is how to connect the controller.
Please note the centre terminal must not be used

If in doubt please consult a qualified electrician
Do not attempt to push the control knob. Doing this may cause damage
The controller should not be adjusted if it is damp or raining, do not touch it with wet hands, do not allow the controller to become wet.
Failure to wire the controller correctly may result in damage to the controller and or pump, and in extreme cases death
Exclusive Fountains accepts no error what so ever for your error , incompetence, Death etc.